


Applique assembly instructions...



YOU WILL RECEIVE THE STRUCTURE OF THE APPLIQUE
ALREADY ASSEMBLED AND PROVIDED WITH LIGHT.



1) FIRST YOU MUST UNSCREW THE RING BY TURNING IT
ANTICLOCKWISE.

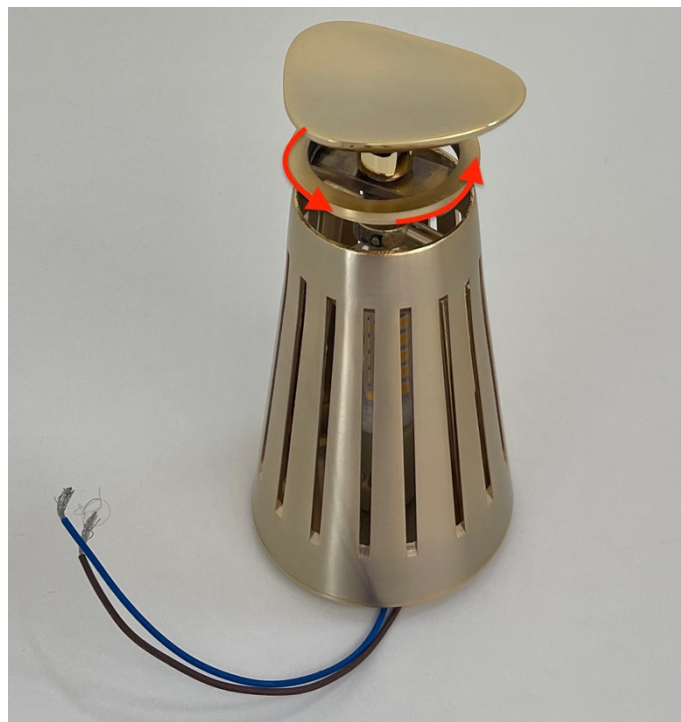

2) WHEN YOU HAVE FINISHED UNSCREWING THE RING, THE STRUCTURE WILL BE DISASSEMBLED AND YOU WILL HAVE THESE FOUR COMPONENTS.



3) NOW YOU MUST FIX THE INTERNAL STRUCTURE OF THE APPLIQUE TO THE WALL AND THE LIGHT ASSEMBLY TO THE CURRENT.



4)AFTER FIXING THE BASE, YOU NEED TO INSERT THE OUTER CONE AND SCREW THE RING CLOCKWISE SO AS TO SECURELY FIX THE STRUCTURE.



5) FINALLY YOU MUST PLACE THE GLASS HOLDING IT WITH YOUR HAND AND SCREW THE FINAL OF THE APPLIQUE UNTIL IT WILL NO LONGER TURN. AT THIS POINT THE 'CONCHIGLIA' WALL LAMP WILL BE COMPLETELY ASSEMBLED.

